



# Growing Spaces

Where life thrives.


## BAYLISS PISTON REPLACEMENT

---

### TOOLS REQUIRED:

Slant head screwdriver  
Pair of pliers or vice grips


View from side

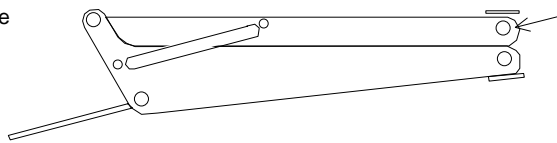

Pry off retainer ring with a slant head screw driver. It does not come off easily. (It will need to go back on so do not ruin it.)

Once the ring is removed, pull out the retaining pin. When you remove the pin, note that there are 2 neoprene washers on either side of the end of the piston. (See illustration below.) These will fall out when you remove the pin.

View from underneath

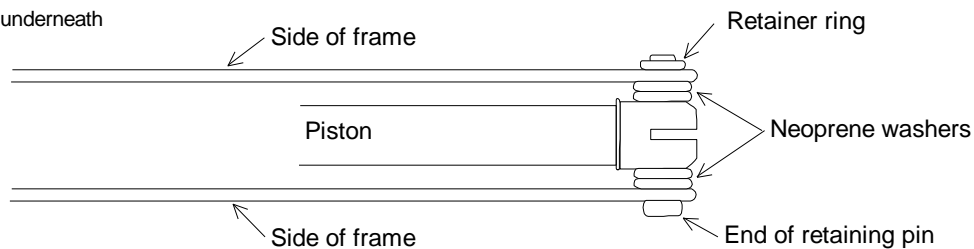

You may have to prop open the vent to dislodge the piston. Replace with new piston. Make sure to replace the washers. Push the retaining pin through side frame/washers/end of piston/washers/other side frame.

Replace retainer ring over end of retaining pin. Use a pair of pliers or vice grips to push it back in place.